



Wall receiver clip

Product code: W/Receiver01

Overview

The Skipper wall receiver clips allow the tape end to attach direct without the need for another Skipper unit. Unlike the magnetic version, the wall receiver clips are intended for permanent/semi-permanent fixture. Simply screw the receiver clip into the desired position. Any Skipper tape end clip (including the XS unit) will then slide into the receiver clip.

Product Specifications

| | |
|-------------|---------------|
| Width: 80mm | Height: 100mm |
| Depth: 23mm | Weight: 45g |

Key selling points

- Attach any Skipper tape end clip to a wall to end a line
- Designed for permanent/semi-permanent fixture

Key features

- Use with Skipper or Skipper XS unit tape end clips
- Has four screw holes for affixing to walls



Receiver clips can be used with both the Skipper and Skipper XS units

Product FAQs

Q. What type of screws should I use?

A. We recommend using a screw and roll plug for the chosen surface. The screw head should be at least 10mm in diameter. Fasten tightly with a screwdriver until the clip is secure. We also recommend using a washer to protect the clip.



Product and packaging